

## INSTALLATION INSTRUCTIONS

# Flexi-Dry Retractable Clothesline

## Single and Twin Line



Please check the carton contains all the required parts before installing the clothesline.

Your carton should contain the following:

1. **Daytek Flexi-Dry Retractable Clothesline** x 1
2. **Wall to Wall fixing pack including detailed installation instructions** x 1  
(Fixing pack provided is for installing to bricks and timber walls only. For fixing to other type of wall structures consult your local hardware specialist)

Tools required for installation.

- 5m measuring tape
- Pencil or marker
- Hammer
- Hammer Drill
- Masonry drill bit (8mm diameter)
- Screw Driver (Phillip Head)
- Twist drill 2mm diameter (optional)

## INSTALLATION OPTIONS.

---

Wall to Wall - All fixing required included inside pack


## INSTALLATION INSTRUCTIONS.

---


**Important:** Recommended installation height of line from ground level is **USER HEIGHT + 100mm**  
Maximum wall to wall distance of 15 metres. Ensure selected position has a clearance of 0.5 - 1 metre minimum on either side.

**For timber wall installations,** follow instructions and use 2mm diameter to drill all mounting hole positions and discard plastic plugs when installing cabinet and retaining hook.


1. Mark recommended installation height, cabinet and retaining hook position.

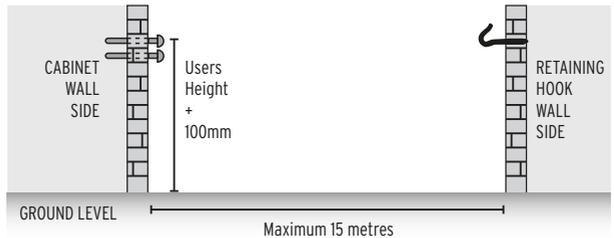


2. In cabinet wall side, turn mounting bracket facing against the wall and mark two hole positions.  
Drill two holes with 8mm diameter x 35 - 40mm depth.

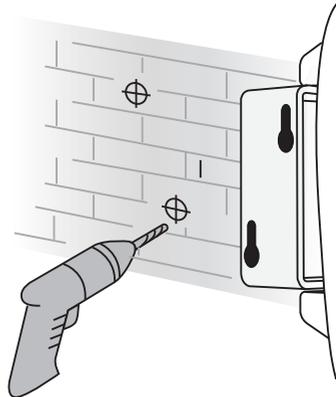


3. In retaining hook wall side, drill hook position with 8mm diameter x 35 - 40mm depth. (For Twin Line model, repeat Step 3 to drill second hook position. Recommended centre to centre hole positions 50mm - 80mm.)

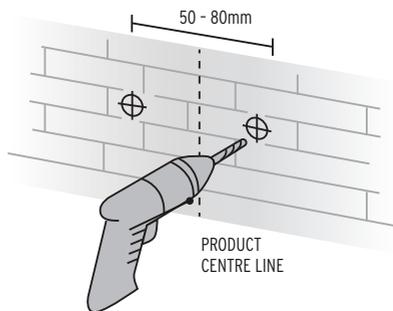


4. To install retaining hook, insert plug into the hole and screw hook into position. (For Twin Line model, repeat Step 4 to install second retaining hook)

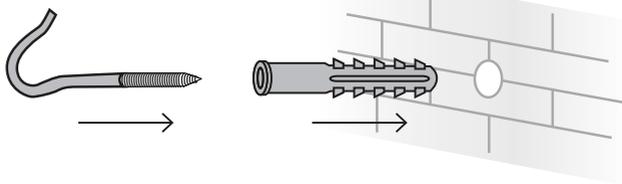

5. To install cabinet, insert plastic plug into the hole and affix screws leaving 6-8mm distance from shoulder head to the wall.

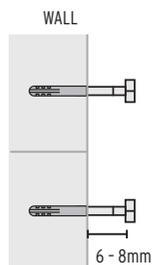


6. Align and locate cabinet mounting hole into screw and pull down slightly to secure correctly. Tighten screws into positions.

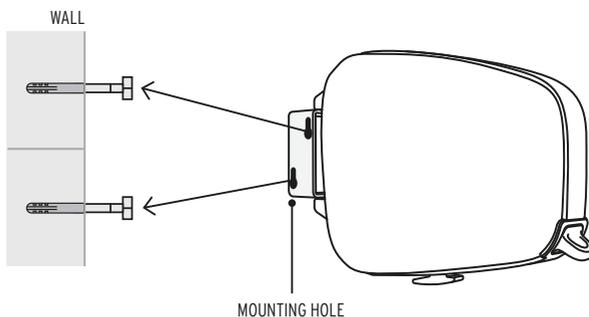


## OPERATING INSTRUCTIONS.


1. Gently pull line out of the cabinet.

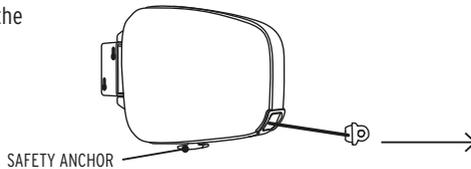

2. Extend line and securely hook onto the retaining hook on the opposite wall.

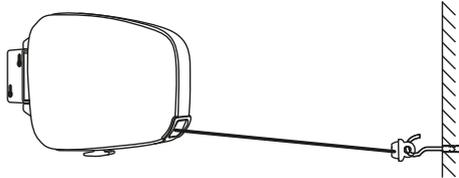

3. From cabinet side, pull the line taut and loop around safety anchors twice to secure the line. (For Twin Line model, repeat Step 1 - 3 to extend second line)

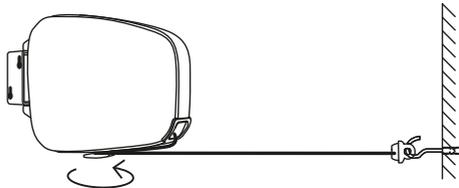

### SAFETY HINT.

Do not use clothesline other than to hang and dry washing.  
Ensure clothesline is not used as play item by children swinging or hanging on lines.

## 2 YEAR PRODUCT WARRANTY.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If any part of this clothesline fails to operate correctly due to workmanship or defective material

Daytek Australia will repair or replace free of cost within 2 years from the date of purchase (Receipt of purchase required). Any evidence of misuse or incorrect adjustment will void the warranty. To claim a product warranty, please contact Daytek Australia directly. You must bear the cost of claiming the warranty. This warranty is in addition to other rights and remedies of the consumer under law.

160R01

Manufactured/Supplied by Daytek Australia Pty. Ltd.

77-81 Gower Street, Preston

Victoria 3072 Australia

T +61 3 9470 1755

F +61 3 9470 5381

E [enquiry@daytek.com.au](mailto:enquiry@daytek.com.au)

[daytek.com.au](http://daytek.com.au)



**Daytek**<sup>®</sup>  
Design for Today